



# Assembly Instructions

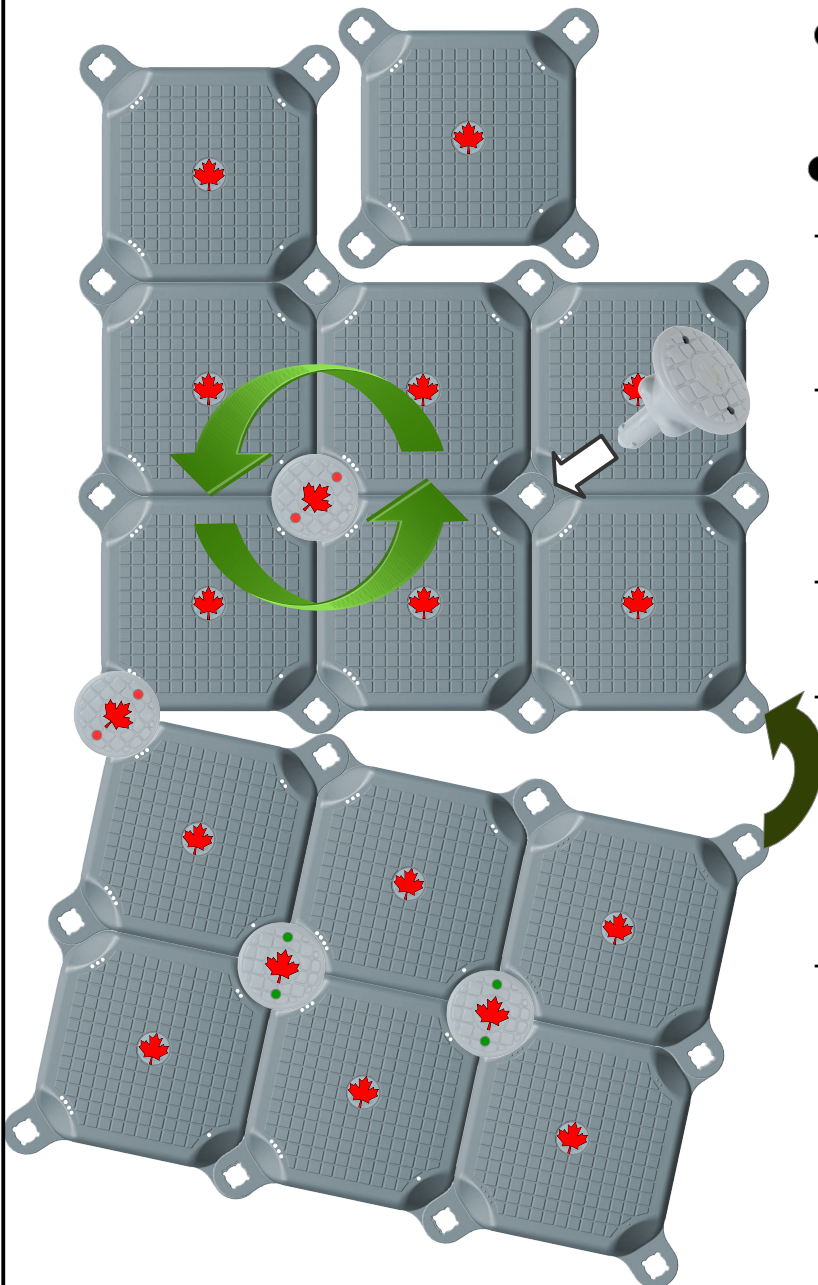

- Assemble on Level Ground during cooler part of the day
- Make sure ALL LOGOS (Maple Leaf) point in same direction.
- Make sure all Corner Lugs are in proper sequence. Each corner is marked with a Number (DOT) 1 – 4. Sequence is Counter Clockwise with Corner (LUG) 1 on top and 4 on the bottom.

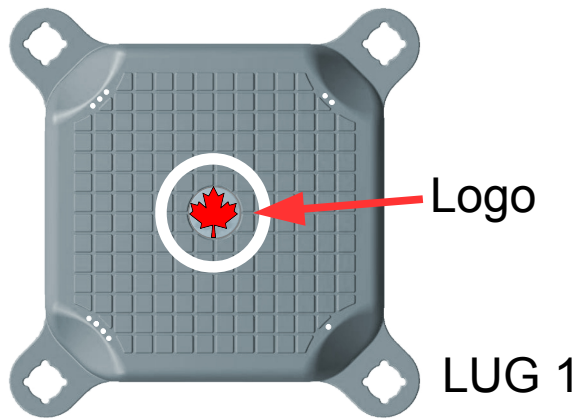

- Make sure Lug Sequence is correct on outer edges. Surface of Jetfloat System must be even.
- Insert Connecting Pin. Do not be shy. Kick the pin in with foot. Avoid standing on # 4 corner when inserting Connecting Pin. This can cause the lower Lug # 4 to push away.
- Use extra pins or other fasteners to hold outer Lugs together before inserting Connecting Pin.
- Once Connecting Pin is inserted completely, Use Key to Lock into place. A 45 deg. Snap or Turn in either direction is required to lock pin into place. When the Key Holes on the Connecting Pins line up with the Seams of Joining Units, the system is locked.
- Assemble Larger sections on land if possible. Connect larger sections together on the water by Pinning two outer Lugs with an extra pin or other accessory. Then bring the Larger sections together in a “scissor” type motion. Insert and lock remaining Pins.